

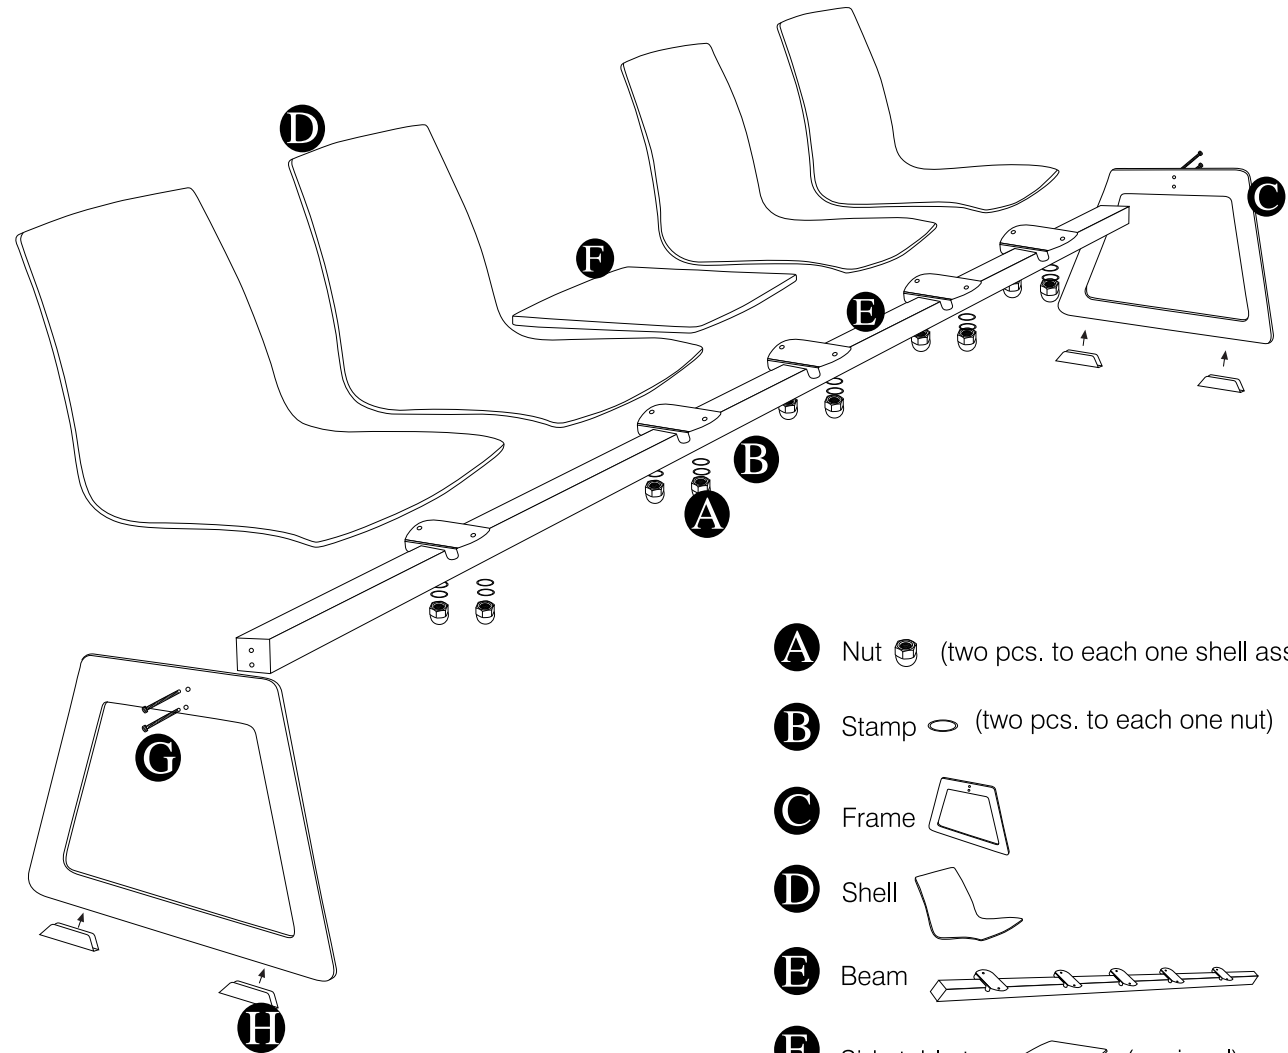
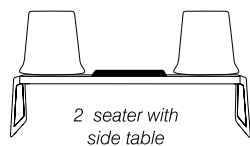
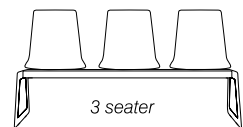
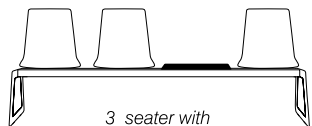
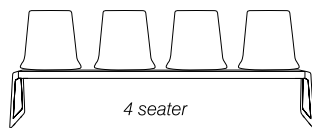


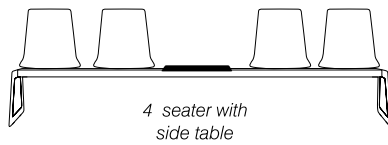

X-TREME BENCH ASSEMBLY INSTRUCTION

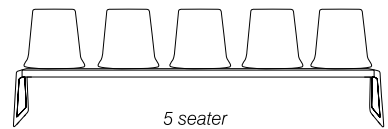

A Nut  (two pcs. to each one shell assembly)

B Stamp  (two pcs. to each one nut)


C Frame 

D Shell 

E Beam 


F Side table top  (optional)

G Screw 


H Foot insert 

X-TREME BENCH ASSEMBLY INSTRUCTION

- 1** As first step fix the metal frame (C) with the help of screws(G) on to beam(E).

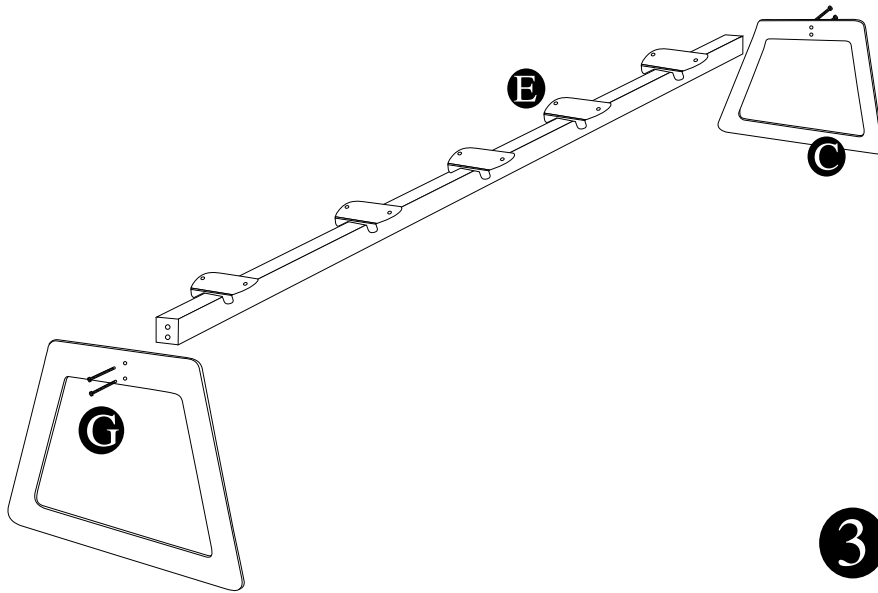

- 2** Fix the shells (D) with the help of nut(A) and stamps(B) on the beam (E).

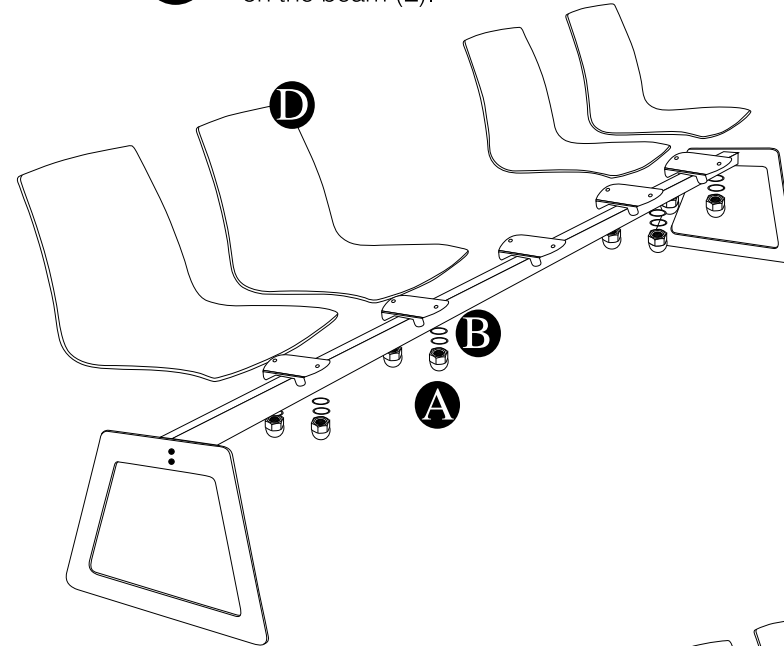

- 3** As finally fix the side table top (F) with the help of nut(A) on to beam (E) and finally place the foot insert(H).

