


Material Identification

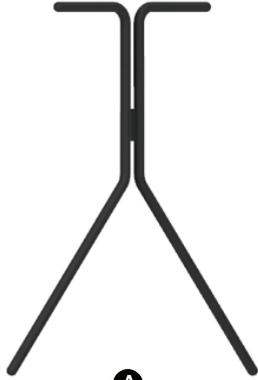

A
1 pcs.
Base



B
1 pcs.
Base

Place Base(B) on a flat and stable ground.

Hold Base(B) above Base(A) in the plus (+) position.

Make sure alignment was done perfectly.

Thread Base(B) into the Base(A)
by pushing amount of force.

